 
 
 


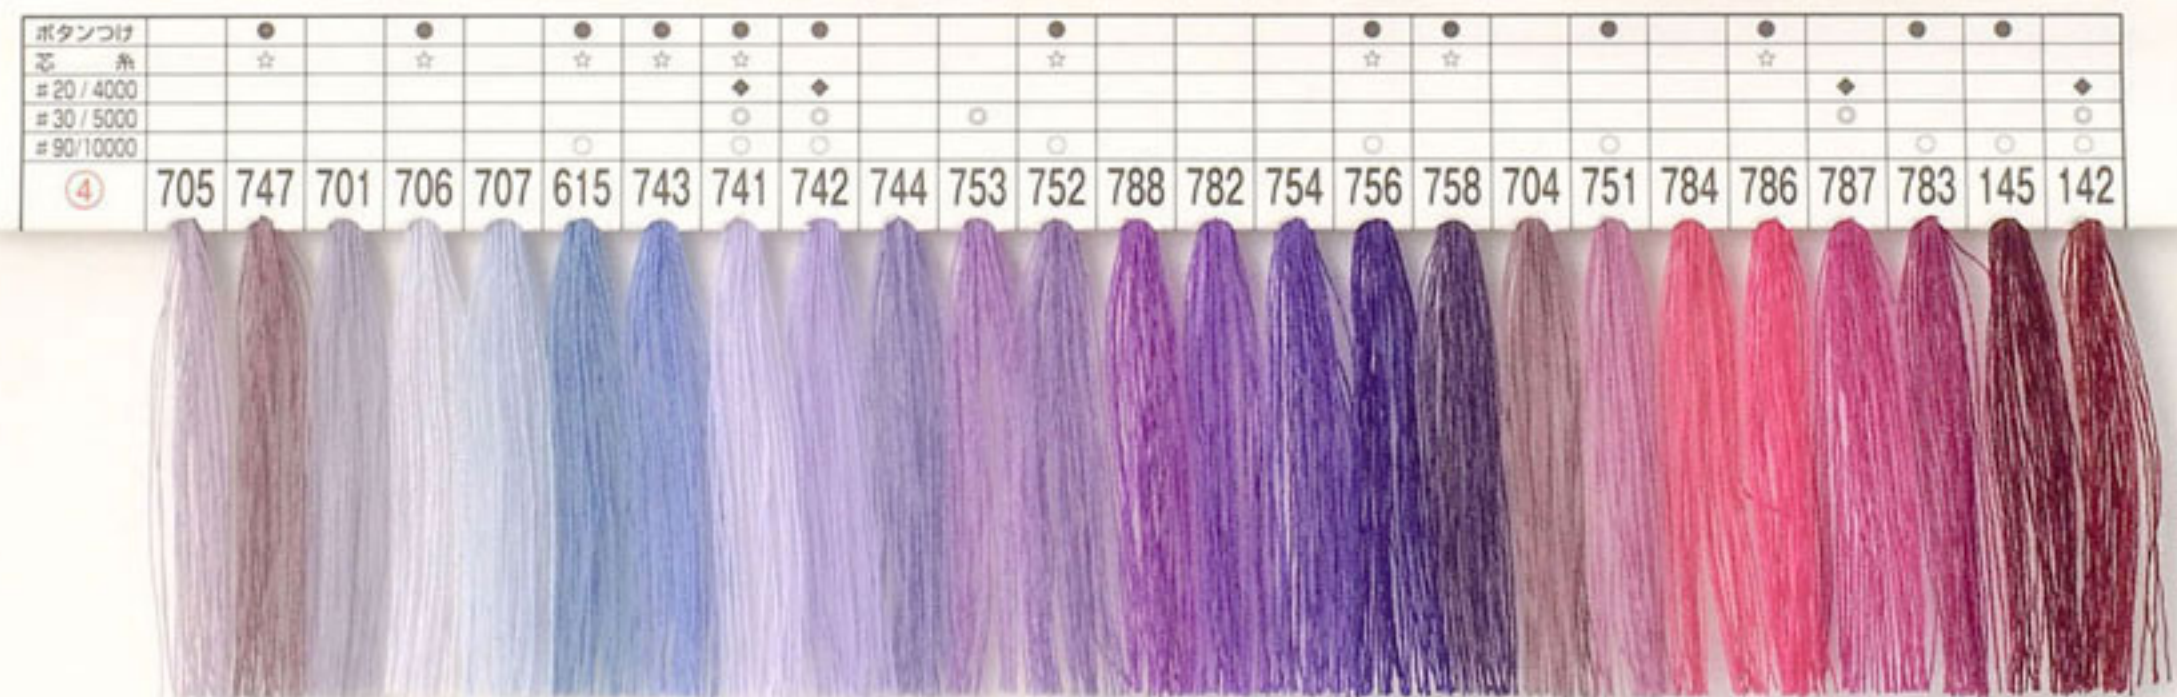

ボタンつけ	●		●		●					●			●	●		●	●							●	
芯糸	☆				☆					☆						☆								☆	
#20 / 4000	◆			◆					◆				◆	◆	◆	◆	◆				◆		◆		
#30 / 5000	○			○		○			○				○	○	○	○	○	○			○		○		
#90 / 10000	○		○									○											○		
⑨	955	965	432	484	475	490	476	445	486	971	981	485	975	980	880	924	970	929	966	978	877	954	973	934	977

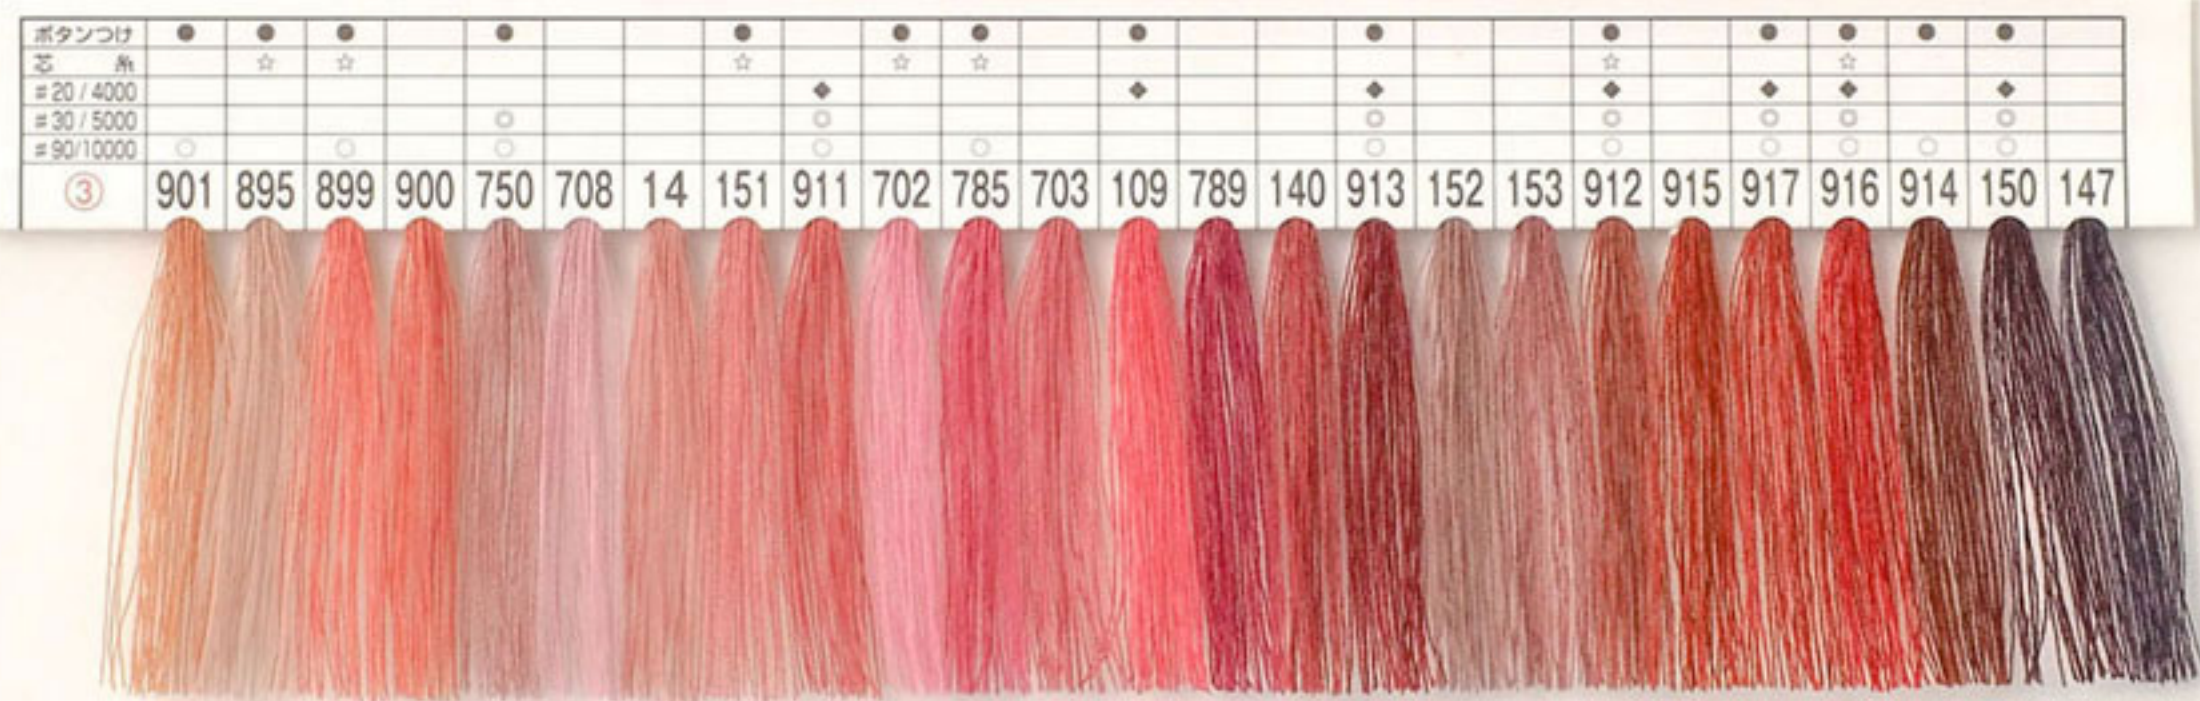

ボタンつけ	●				●		●			●		●	●					●		●			●		
芯糸			☆					☆	☆		☆	☆						☆				☆			
#20 / 4000			◆		◆	◆					◆	◆	◆				◆			◆		◆			
#30 / 5000			○	○	○	○		○			○	○	○	○			○	○		○	○	○			
#90/10000	○				○	○						○	○	○				○		○		○			
⑩	487	482	481	883	974	976	985	478	846	477	986	473	472	474	825	841	836	988	932	947	987	989	949	935	948

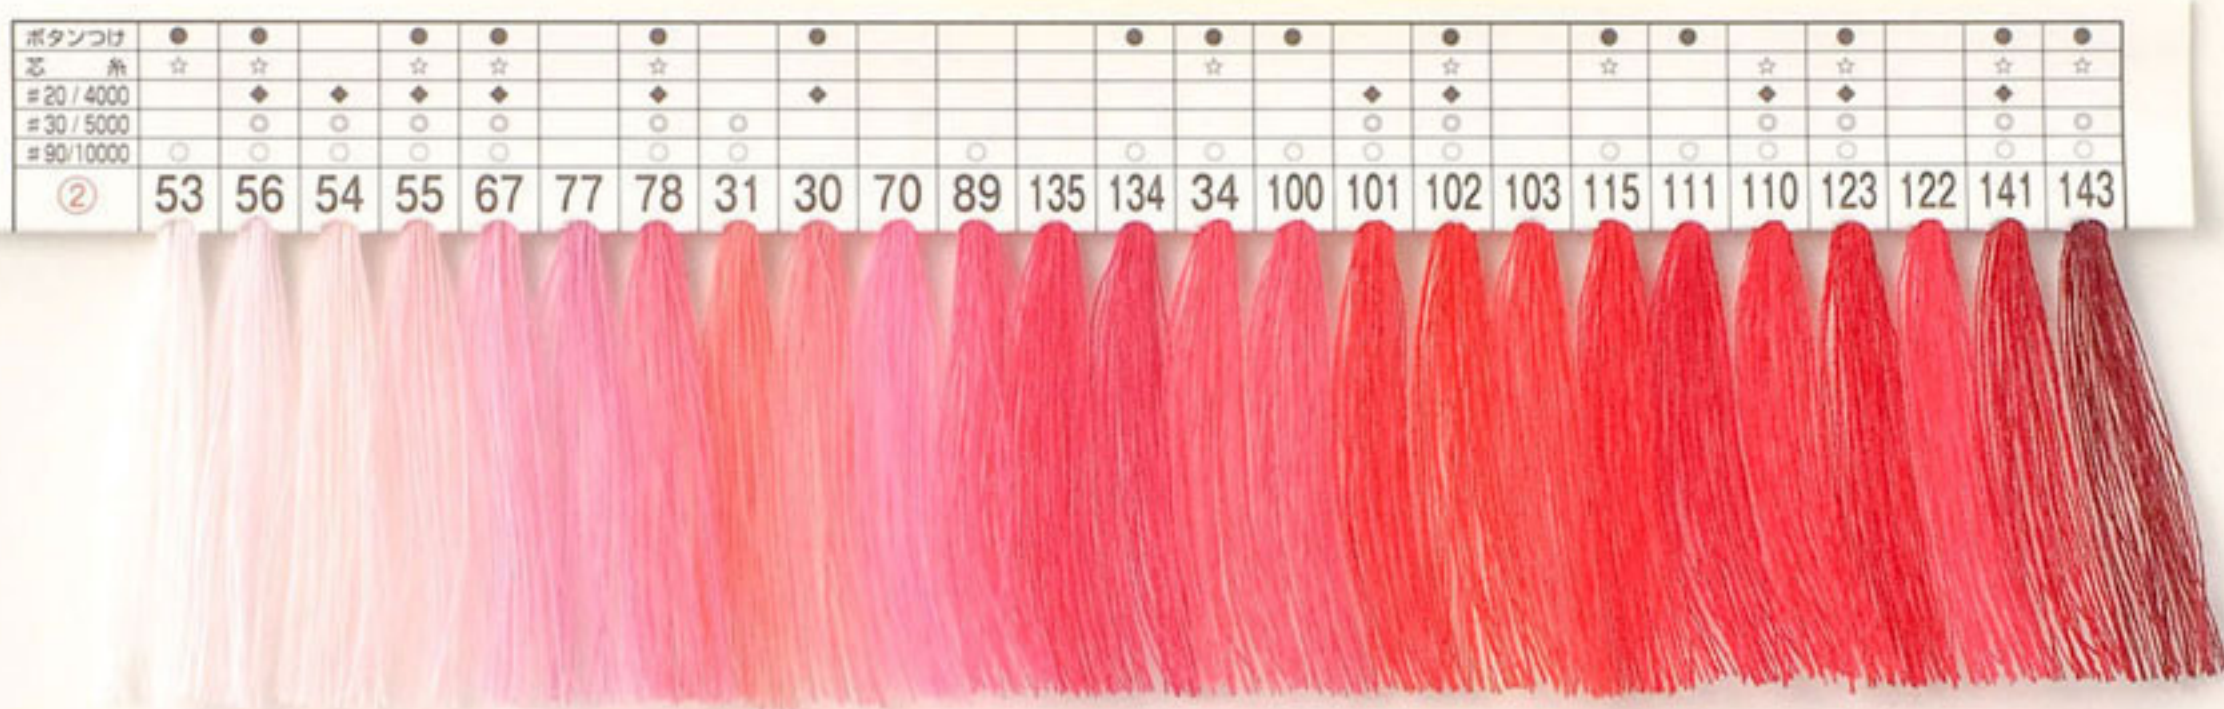

ボタンつけ	●	●	●	●	●			●				●	●		●			●	●	●	●	●	●		
芯糸		☆		☆				☆				☆	☆		☆					☆			☆		
#20/4000	◆		◆	◆	◆			◆				◆	◆		◆	◆	◆	◆	◆	◆	◆	◆	◆		
#30/5000	○		○	○	○			○				○	○		○	○	○	○	○	○	○	○	○	○	
#90/10000	○	○	○	○	○	○		○				○	○	○				○	○	○	○	○	○	○	
⑪	600	605	651	602	655	603	653	620	663	662	619	622	610	613	624	685	522	680	623	686	683	545	634	640	641



ボタンつけ	●	●				●						●			●	●	●	●	●			●			
芯糸	☆	☆				☆						☆			☆	☆	☆	☆	☆			☆			
#20/4000	◆	◆						◆		◆	◆		◆				◆	◆	◆	◆			◆		
#30/5000	○	○			○			○		○	○		○	○		○	○	○	○	○	○		○	○	
#90/10000	○	○											○			○	○	○	○	○	○	○	○	○	
⑫	689	639	645	554	544	429	547	694	695	540	596	541	835	831	550	549	684	692	690	642	644	643	691	693	696



ボタンつけ	●	●	●				●				●		●		●		●		●		●		●		
糸	☆	☆	☆				☆				☆		☆		☆		☆		☆		☆		☆		
#20 / 4000		◆	◆					◆			◆	◆	◆		◆	◆	◆		◆			◆	◆		
#30 / 5000		○	○					○			○	○	○		○	○	○		○			○	○		
#90/10000	○	○									○		○	○	○	○		○				○	○		
⑬	922	956	810	960	875	878	873	879	872	876	950	961	951	483	953	972	931	962	882	938	984	881	896	969	979

ボタンつけ	●		●	●	●		●	●			●		●		●		●		●	●	●	●	●	●	●
糸	☆		☆	☆		☆		☆			☆				☆				☆		☆		☆	☆	☆
#20/4000	◆		◆	◆		◆	◆	◆	◆			◆		◆		◆			◆		◆	◆	◆	◆	◆
#30/5000	○		○	○		○	○	○	○			○		○	○	○		○		○		○	○	○	○
#90/10000	○	○																							
(14)	926	928	925	937	930	936	940	963	941	906	902	905	904	910	939	990	942	933	898	945	944	946	943	957	982

ボタンつけ	●			●		●	●	●	●	●	●	●		●		●					●	●			
糸	☆			☆	☆	☆	☆	☆	☆	☆	☆	☆					☆				☆	☆			
#20 / 4000				◆						◆		◆	◆	◆	◆	◆						◆	◆		
#30 / 5000				○	○				○	○	○	○	○	○	○	○						○	○		
#90/10000	○		○						○	○	○	○	○	○	○	○			○			○	○		
(15)	804	802	811	814	797	796	826	800	812	952	801	817	816	813	818	819	820	799	798	828	822	815	823	834	843

ボタンつけ		●	●		●			●						●	●		●					●	●		
糸		☆	☆		☆			☆						☆	☆		☆					☆	☆		☆
#20/4000			◆	◆	◆				◆		◆		◆							◆			◆	◆	◆
#30/5000	○		○	○	○				○		○		○	○	○					○			○	○	○
#90/10000			○																						
(16)	848	845	855	830	842	839	824	837	838	827	847	833	829	851	850	840	866	867	471	868	869	849	871	870	844