

This exploded view diagram illustrates the assembly of a power tool, likely a chainsaw or similar cutting device. The components are numbered 1 through 17, and their assembly sequence is indicated by dashed lines and arrows.

- Fig. 17~22**: This label is positioned near the top left of the diagram, indicating the range of figures associated with this assembly.
- Component 1**: The main housing or engine casing, shown at the top left.
- Component 2**: A small screw or bolt used for securing the housing.
- Component 3**: A cylindrical component, possibly a fuel filter or air filter, located below the housing.
- Component 4**: A long, thin rod or pin, likely a drive shaft or connecting rod.
- Component 5**: A small screw or bolt used for securing the housing.
- Component 6**: A long, thin rod or pin, likely a drive shaft or connecting rod.
- Component 7**: A long, thin rod or pin, likely a drive shaft or connecting rod.
- Component 8**: A rectangular plate or bracket used for mounting.
- Component 9**: A small screw or bolt used for securing the plate.
- Component 10**: A small screw or bolt used for securing the plate.
- Component 11**: A small screw or bolt used for securing the plate.
- Component 12**: A small screw or bolt used for securing the plate.
- Component 13**: A small screw or bolt used for securing the plate.
- Component 14**: A small screw or bolt used for securing the plate.
- Component 15**: A small screw or bolt used for securing the plate.
- Component 16**: A small screw or bolt used for securing the plate.
- Component 17**: A small screw or bolt used for securing the plate.

The diagram shows the assembly of the engine housing (1) with various components (2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17) being attached. The assembly is shown in a disassembled state, with dashed lines indicating the assembly path. The components are labeled with numbers 1 through 17. The diagram is divided into two sections by a dashed line, with the top section showing the engine housing and the bottom section showing the mounting plate and other components. The label "Fig. 17~22" is located at the top left of the diagram. The label "MSA415R4C-125" is located at the bottom right of the diagram, and the label "MS415R4CF-125" is located at the bottom right of the diagram.