



DIN レール取付対応ファン 取付方法

製品について


この製品は、DIN レール取付プレートをプロペラファンに組み付けてあります。プロペラファンの設置、接続、および運転は、別冊の取扱説明書をご覧ください。

入カタイプ	品 名	ファン品名
DC 入力	V-MD825B24L	MD825B-24L
AC 入力	V-MU825S13	MU825S-13
	V-MU825S43	MU825S-43

吐出し方向の変更

吐出し口の方向を 45°単位で変えられます。吐出し方向の変更は、ファンを DIN レールに取り付ける前に行なってください。

1. DIN レール取付プレートとファンを組み付けているねじ(M5)を緩めます。
2. ファンに取り付けてある金具の突起部(4 か所)をガイドにして、取付プレートの貫通穴(8 か所)を合わせ、吐出し口の方向を変更します。
吐出し口の方向は 45°単位で変えられます。
3. ねじを締め付けます。
締付トルク: 1~2 N・m

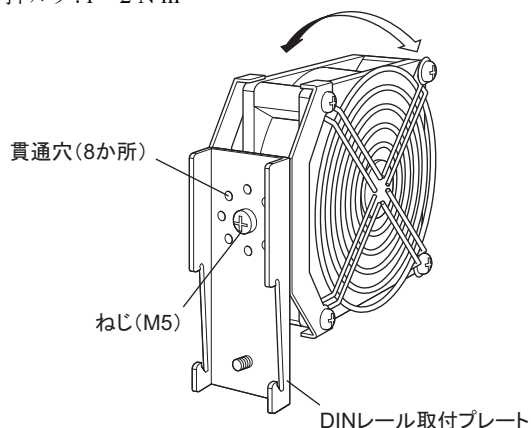

Orientalmotor は、日本その他の国におけるオリエンタルモーター株式会社の登録商標または商標です。

© Copyright ORIENTAL MOTOR CO., LTD. 2010

オリエンタルモーター株式会社

<http://www.orientalmotor.co.jp/>

お問い合わせ窓口・訪問サービスのご案内 (携帯電話・PHSからもご利用可能です)

• 製品に関するお電話での技術的なご相談
(通話料無料)

お客様ご相談センター

東京 TEL 0120-925-410 FAX 0120-925-601
名古屋 TEL 0120-925-420 FAX 0120-925-602
大阪 TEL 0120-925-430 FAX 0120-925-603
受付時間 平日 8:00~20:00 土曜日 9:00~17:30

• 現場での問題解決にサービスエンジニアの訪問をご希望の場合 (無料)

フィールドサービス

TEL 0120-911-271
受付時間 平日 9:00~18:30

Axial Flow Fan with DIN Rail Mounting Plate Installation method

About product

This product is preassembled an axial flow fan on a DIN rail mounting plate. Refer to OPERATING MANUAL for installing and connecting the axial flow fan as well as the operation.


Input type	Model	Fan model
DC power supply input	V-MD825B24L	MD825B-24L
AC power supply input	V-MU825S13	MU825S-13
	V-MU825S43	MU825S-43

Changing the exhaust direction

The exhaust direction can be changed to one of eight 45° directions. Change the exhaust direction before installing the fan on DIN rail.

1. Loosen the screw (M5) that is assembled the fan on the DIN rail mounting plate.
2. Adjusting the projection parts (convexity parts: 4 locations) on the plate attaching the fan and through holes (concavity parts: 8 locations) on the DIN rail mounting plate, you can change the exhaust direction for the fan.
The exhaust direction can be changed to one of eight 45° directions.

3. Tighten the screw.
Tightening torque: 1 to 2 N·m (8.8 to 17.7 lb-in)

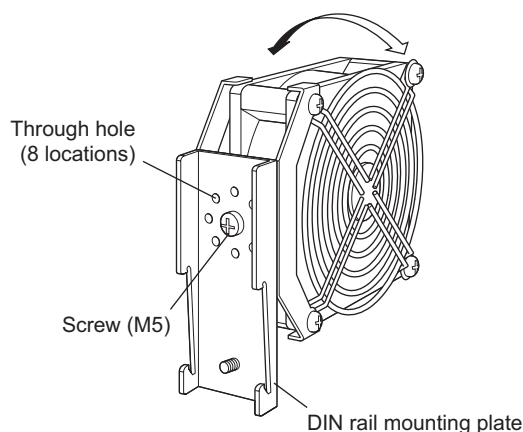

Orientalmotor is a registered trademark or trademark of Oriental Motor Co., Ltd., in Japan and other countries.

© Copyright ORIENTAL MOTOR CO., LTD. 2010

• Please contact your nearest Oriental Motor office for further information.

ORIENTAL MOTOR U.S.A. CORP.
Technical Support Tel:(800)468-3982
8:30 A.M. to 5:00 P.M., P.S.T. (M-F)
7:30 A.M. to 5:00 P.M., C.S.T. (M-F)
E-mail: techsupport@orientalmotor.com
www.orientalmotor.com

ORIENTAL MOTOR (EUROPA) GmbH
Headquarters and Düsseldorf Office
Tel:0211-52067-00 Fax:0211-52067-099
Munich Office
Tel:089-3181225-00 Fax:089-3181225-25
Hamburg Office
Tel:040-76910443 Fax:040-76910445

ORIENTAL MOTOR (UK) LTD.
Tel:01256-347090 Fax:01256-347099

ORIENTAL MOTOR (FRANCE) SARL
Tel:01 47 86 97 50 Fax:01 47 82 45 16

ORIENTAL MOTOR ITALIA s.r.l.
Tel:02-93906346 Fax:02-93906348

SHANGHAI ORIENTAL MOTOR CO.,LTD.
Tel:400-820-6516 Fax:021-6278-0269

TAIWAN ORIENTAL MOTOR CO.,LTD.
Tel:(02)8228-0707 Fax:(02)8228-0708

SINGAPORE ORIENTAL MOTOR PTE LTD
Tel:+65-6745-7344 Fax:+65-6745-9405

ORIENTAL MOTOR (MALAYSIA) SDN. BHD.
Tel:(03)22875778 Fax:(03)22875528

ORIENTAL MOTOR (THAILAND) CO.,LTD.
Tel:+66-2-251-1871 Fax:+66-2-251-1872

INA ORIENTAL MOTOR CO.,LTD.
KOREA

Tel:080-777-2042 Fax:02-2026-5495

ORIENTAL MOTOR CO.,LTD.
Headquarters Tokyo, Japan
Tel:03-6744-0361 Fax:03-5826-2576