


①


Installation of 4 casters on the base

Castor wheel

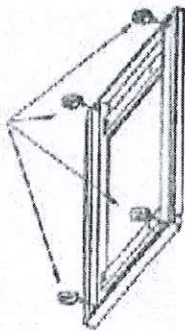

②

Fix two columns with 12 M8 \* 40 hexagon socket bolts \* gaskets

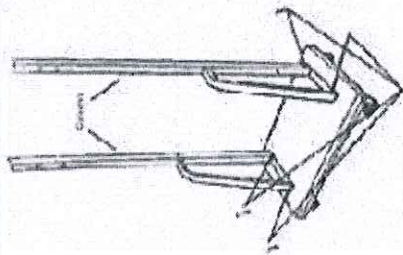


4-M8 \* 40 bolt

③

6


Fix the "middle tray" with 4 M6 \* 70 hexagon socket bolts \* washers \* nuts

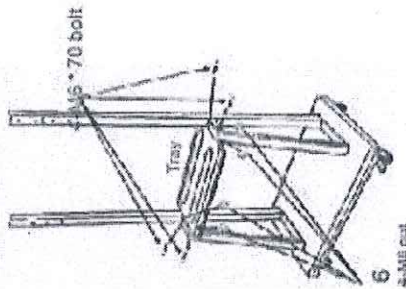

6 4-M6 nut

④

Fix the "TV hanging plate" with 4 M8 \* 70 outer hexagob bolts \* washers \* M8 \* nuts

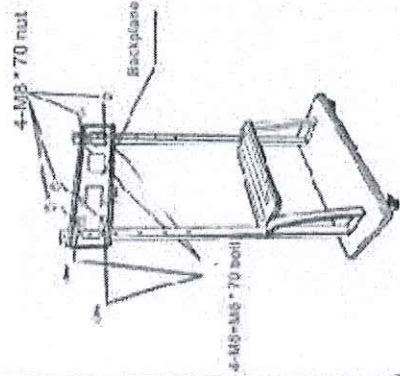


4-M8-M8 \* 70 bolt

Backplate

⑤

Install the upper tray accessories with cross screws, and then install them with the TV hanging plate.

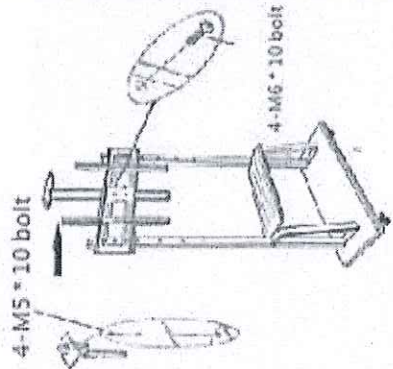


4-M5 \* 10 bolt

4-M6 \* 10 bolt

⑥


The hook is installed on the back of the TV with appropriate screws

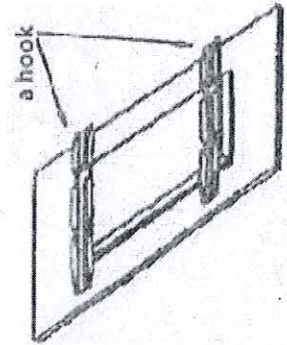

a hook


⑦

Hang the "hook" into the TV Hanging board

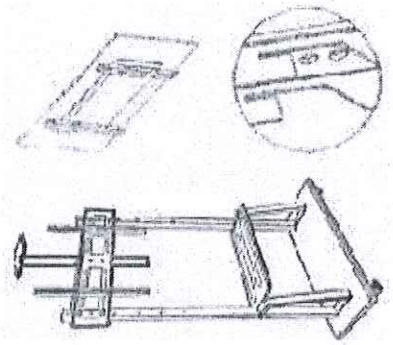

⑧

After hanging the TV, lock the safety screw.

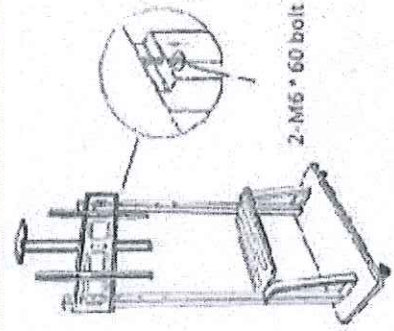

2-M5 \* 60 bolt