


図面／規格
【蝶ナット（１種）】

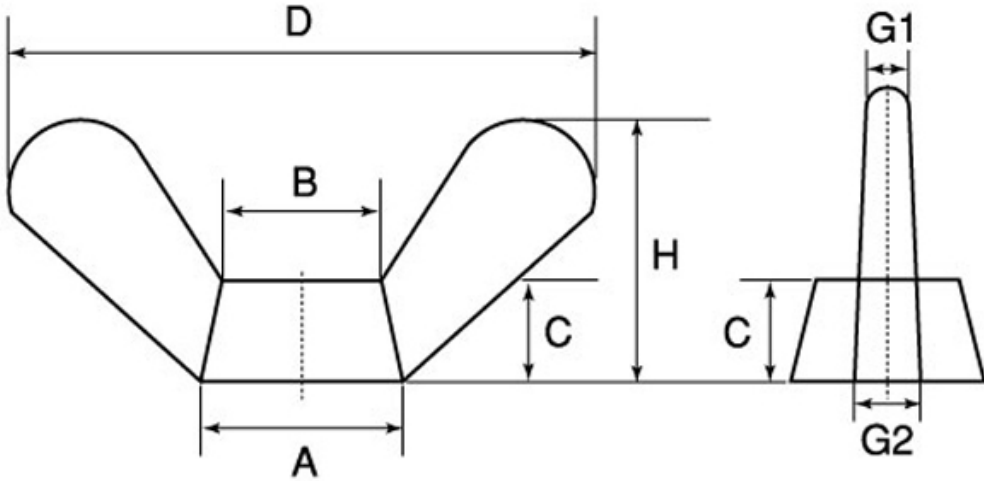

鉄・SUS									
ねじの 呼び	A	B	※ C	D		※ H		G1	G2
	最小	約	最小	基準 寸法	許容差	基準 寸法	許容差	最大	最大
M 4	8.5	7	7	25	± 1.5	12	± 1.5	3.5	4.5
M5	8.5	7	7	25		12		3.5	4.5
M6	10.5	9	11	32	± 2.0	18		4	5
M8	14	12	11	40		21		4.5	5.5
M10	18	15	15	50		26		5.5	6.5
M12	22	18	16	60		29	± 2.0	7	8
M14	26	22	17	70	± 2.5	34		8	9
M16	26	22	17	70		34		8	9
M18	34	28	23	90		46		9	11
M20	34	28	23	90		46		9	11
M22	34	28	23	90		46		9	11
M24	43	36	23	112		56		11	13

※ C 寸法及び※ H 寸法はメーカーオリジナル規格となります

真鍮							
ねじの 呼び	A	B	C	D	H	G1	G2
M4	7	6	4	20	10	3	4
M5	8.5	7	5	25	12	3.5	4.5
M6	11.4	9.5	7.6	31.8	15.2	2.3	3.6
M8	14.8	11	10	39.3	19.9	3.5	4.9
M10	18.3	14	11.5	49	24.5	3.7	5
M12	23.8	18	13.4	60.2	30.4	5.5	6.8